


PLASTIC PIPE CEMENTS




| PVC | 1/4 PT | 1/2 PT | 1 PT | 1 QT |
|--|----------|--------|-------|-------|
| Regular(05) (Sch 40) Clear | \$ 11.75 | 17.01 | 29.87 | 47.50 |
| Heavy Duty(11) (Sch 80) Gray | | 27.82 | 37.08 | 62.40 |
| Lava Hot(50) Blue | 11.30 | 18.65 | 31.88 | 53.54 |
| Medium-Body(21) Blue | 12.58 | 20.67 | 35.37 | 59.45 |
| Wet/Dry(25) Blue | 12.58 | 20.41 | 34.72 | 58.20 |
| PVC / CPVC(70) (NSF Purple Primer) | 12.58 | 17.12 | 34.21 | 55.45 |
| | 1/4 PT | 1/2 PT | 1 PT | 1 QT |
| ABS(73) | 11.55 | 15.61 | 26.03 | 42.61 |
| ABS - PVC(94) | 14.25 | 20.84 | 33.95 | |
| CPVC(CTS5) | 9.80 | 14.95 | | |
| ALL-PURPOSE(90) | 13.43 | 19.70 | | |

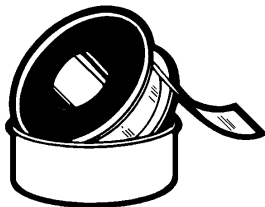

Wrap Tape In Direction of Threads (clockwise for right-hand thread). Use ONLY 2-3 wraps of tape.

Joint Assembly:
 Tighten threaded joints 1-2 turns beyond finger tight. Avoid "backing up" the wrenched assembly. DO NOT over-tighten.

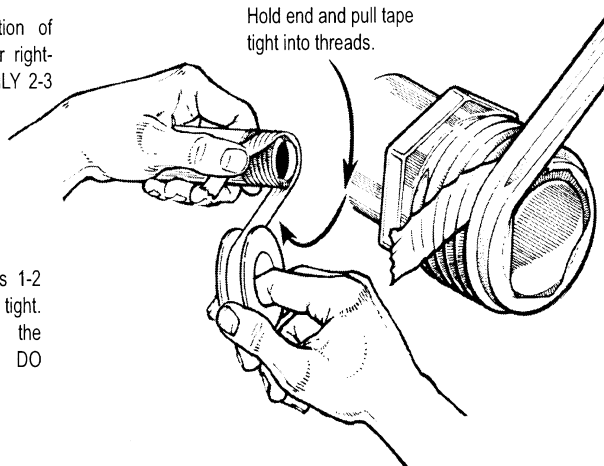

Hold end and pull tape tight into threads.

Use a TFE Tape Sealant with a minimum thickness of 25 mil.

Always cover end of fitting at the start to prevent thread seizing prior to proper joint makeup.

TEFLON TAPE

| | | | | | |
|----------------------------|--------------|-------------|--------------|------------------------------|------------|
| | 1/2" x 260" | 1/2" x 520" | 3/4" x 260" | 3/4" x 520" | 1" x 520" |
| | \$.70 | .92 | 1.20 | 1.55 | 2.05 |
| HIGH DENSITY (Blue) | | | | | |
| | 1/2" x 1429" | \$ 6.10 | 3/4" x 1429" | 8.25 | 1" x 1429" |
| | | | | | 10.50 |
| HIGH DENSITY (Pink) | 1/2" x 260" | \$ 4.95 | 4.95 | 1/2" x 260" (YELLOW) FOR GAS | |