

PLASTIC PIPE CEMENTS



PVC 1/4 PT 1/2 PT 1 PT 1 QT

Regular(05) (Sch 40) Clear \$ 6.30 9.15 15.98 25.50

Heavy Duty(11) (Sch 80) Gray 14.90 19.85 33.40

Red Hot(50) Blue 6.10 9.95 17.10 28.75

Medium-Body(21) Blue 6.75 11.10 18.95 31.85

Wet/Dry(25) Blue 6.75 10.95 18.60 31.15

PVC / CPVC(70) (NSF Purple Primer) 6.75 9.20 18.40 29.70

1/4 PT 1/2 PT 1 PT 1 QT

ABS(73) 6.20 8.25 13.95 22.80


CPVC(CTS5) 7.70 12.25

MULTI-PURPOSE(90) 7.25 10.60




APPLICATORS

BCP-1 Reusable 1" Brush Cap for Pt. & Qt. cans	\$ 10.50
DP-75, DP-150 Cap-Daubers	1.30

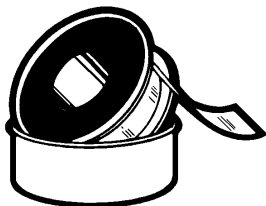

Wrap Tape In Direction of Threads (clockwise for right-hand thread). Use ONLY 2-3 wraps of tape.

Joint Assembly:
 Tighten threaded joints 1-2 turns beyond finger tight. Avoid "backing up" the wrenched assembly. DO NOT over-tighten.

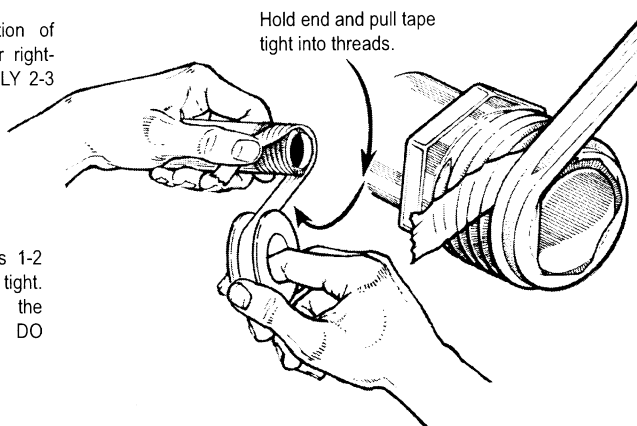

Hold end and pull tape tight into threads.

Use a TFE Tape Sealant with a minimum thickness of 25 mil.

Always cover end of fitting at the start to prevent thread seizing prior to proper joint makeup.

TEFLON TAPE

1/2 x 260"	1/2 x 520"	3/4 x 260"	3/4 x 520"	1 x 520"
\$.70	.92	1.20	1.55	2.05

HIGH DENSITY (Pink) 1/2 x 260" \$ 4.95 4.95 1/2 x 260" (YELLOW) **FOR GAS**